







 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	Recall		Back
	CH +		Ch +
	CH -		Ch -
	Display		Info

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep
	Vol +		Vol +
	Vol -		Vol -
	Menu		Menu
	Exit		Exit
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Source		AV
	EPG		Guide
	Nicam		Options
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	P.Size		Format
	Red / Goto		Red



