

 

 
 
 

 
 
 

 



 

 
 


 

 
 



 




 
 
 

 
 
 

 

 
 


 
 


 


 
 

 
 




 
 
 





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Input		AV
	TV / TXT		Text
	Cancel		Shift + Exit
	Reveal		Smart
	Nicam / A2		Options
	Hold		Stop
	Size		Format
	Subpage		Shift + Subt
	Index		Shift + Info
	Red / TV/Radio		Red
	Red / TV/Radio		TV/R
	Green		Green
	Yellow		Yellow
	Blue		Blue
	CH +		Ch +
	CH -		Ch -
	Vol +		Vol +
	Vol -		Vol -
	Menu		Menu
	Mute		Mute
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	DVB		Media
	Exit		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





**Originalfernbedienung Ersatzfernbedienung**

7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
-/--	-/--	SHIFT + GUIDE	Shift + Guide
Recall	Recall	RETURN BACK	Back
Picture	Picture	SHIFT + PICTURE FORMAT	Shift + Format
Sound	Sound	SHIFT + SOUND DUAL	Shift + Dual
SLE EP	Sleep	PROG SLEEP	Sleep
SUBTITLE	Subtitle	AD SUBT	Subt
LANGUAGE	Language	SOUND DUAL	Dual
DISPLAY/INFO	Display / Info	DISPLAY INFO	Info
ZOOM	Zoom	ZOOM ▲	Eject
TEXT	Text	SHIFT + REPEAT TEXT	Shift + Text
FAV	FAV	FAV PRE-CH	Pre Ch
EPG	EPG	-/-- GUIDE	Guide
FAV -	FAV -	◀◀	I<<

**Originalfernbedienung Ersatzfernbedienung**

FAV +	FAV +	▶▶	>>I

