



Originalfernbedienung	Ersatzfernbedienung
 Open/Close	 Eject / Surround
 OSD	 Display / Media
 Standby/On	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +10	 Guide / EPG / -/-
 0/10	 0
 Goto	 Text / Goto
 Setup	 Setup / OPT /
 Up	 Up

Originalfernbedienung	Ersatzfernbedienung
 Title	 Sound / Title
 Left	 Left
 Enter	 OK
 Right	 Right
 Zoom	 Zoom / Size
 Down	 Down
 Menu	 Menu / Home
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Play/Pause	 Play / Slow
 II>/Step	 Pause / Step / Freeze
 Ran	 Blue / Prime Video / Random
 I>/Slow	 Picture / Format
 Vol-	 Vol-





Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	Angle		Info / Angle
	Video		Shift + 4
	PBC		D.Menu / Top
	Prog		TV/Radio /
	RL		CH+ / Page+
	NP		CH- / Page-
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Return		Back / Return
	Mute		Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

