


 

 
 

 





Originalfernbedienung	Ersatzfernbedienung
	Power
	Open/Close
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
ALARM1	Alarm1
ALARM2	Alarm2
CLOCK	Clock
SLEEP	Sleep
DISPLAY	Display

Originalfernbedienung	Ersatzfernbedienung
	Audio
	Source
	Mute Snooze
	Vol+
	Vol-
	Up
	Down
	Right
	Left
	Enter
	>> /Tu+
	<</Tu-
	Stop
	Play
	Pause
	Repeat
	Shuff



