











 













 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject/Open/Close		Eject / Surround
	DVD		Shift + 2
	VCR		Shift + 4
	AV/Input		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	I.Skip		Text / Goto
	Dubbing		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

	Power Tv		Shift + Power
	AV Input Tv		Shift + AV / Input / RDS
	PR+ Tv		CH+ / Page+
	PR- Tv		CH- / Page-
	Vol+ Tv		Vol+
	Vol- Tv		Vol-
	<<		<< / Tune-
	>>		>> / Tune+
	I<<<		I<<< / Preset-
	>>>I		>>>I / Preset+
	Pause/step		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	Home		Menu / Home
	Disc Menu/List		D.Menu / Top
	Disc Menu/List		Smart / List
	Up/PR/TRK+		Up





Originalfernbedienung Ersatzfernbedienung

	Down/PR/TRK-		Down
	Right		Right
	Left		Left
	Enter		OK
	Display		Display / Media
	Return		Back / Return
	O)/Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Zoom		Zoom / Size
	CHP.Add		Guide / EPG / -/--
	Rec		Rec / Rec Mode
	Rec Mode	+	Shift + Rec / Rec Mode
	Title		Sound / Title
	Thumbnail		Picture / Format
	Play Mode	+	Shift + Play / Play
	Marker		Fav / Marker / PC
	Search		Red / Netflix / Search

Originalfernbedienung Ersatzfernbedienung

	Clear		Exit / Cancel / Clear
	Tv/VCR		TV/Radio /
	Resolution		Setup / OPT /
	ShowView		Info / Angle

