



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Eject/Open/Close		Eject / Surround
	CD/DVD		Shift + 2
	VCR		Shift + 4
	FM/AM		Shift + 6
	AUX		Shift + 7
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	AV		AV / Input / RDS
	7		7
	8		8
	9		9
	0		0

**Originalfernbedienung    Ersatzfernbedienung**

	Program		TV/Radio /
	Clear		Exit / Cancel / Clear
	Sound Mode		Sound / Title
	Audio		Audio / Lang I/II
	Show View		Smart / List
	RDS		Picture / Format
	Display/CLK/CN		Display / Media
	PR/TRK/Preset Up		Up
	Set Up/i		Setup / OPT /
	Left/Tuning-		Left
	OK/Memory/Ent		OK
	Right/Tuning+		Right
	Return		Back / Return
	PR/TRK/Preset		Down
	Disc menu		D.Menu / Top
	Volume+		Vol+
	Rec/ITR		Rec / Rec Mode







**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Eject/Open/Close		Eject / Surround
	CD/DVD		Shift + 2
	VCR		Shift + 4
	FM/AM		Shift + 6
	AUX		Shift + 7
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	AV		AV / Input / RDS
	7		7
	8		8
	9		9
	0		0

**Originalfernbedienung    Ersatzfernbedienung**

	Program		TV/Radio /
	Clear		Exit / Cancel / Clear
	Sound Mode		Sound / Title
	Audio		Audio / Lang I/II
	Show View		Smart / List
	RDS		Picture / Format
	Display/CLK/CN		Display / Media
	PR/TRK/Preset Up		Up
	Set Up/i		Setup / OPT /
	Left/Tuning-		Left
	OK/Memory/Ent		OK
	Right/Tuning+		Right
	Return		Back / Return
	PR/TRK/Preset		Down
	Disc Menu		D.Menu / Top
	Volume+		Vol+
	Rec/ITR		Rec / Rec Mode



