

















 
 
 

















Originalfernbedienung Ersatzfernbedienung

	Standby / On		Power
	Volume +		Vol +
	Volume -		Vol -
	Muting		Mute
	Timer		AV
	Sleep		Sleep
	MP3 / FM Mode		Media
	Function		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	MP3 Folder - / Preset -		Ch -
	MP3 Folder - / Preset -		Down
	MP3 Folder + / Preset +		Ch +
	MP3 Folder + / Preset +		Up
	Band		Menu
	Memory		Info
	Shuffle		Ok
	Repeat		Text
	I<<<< / Tuning -		<<
	I<<<< / Tuning -		I<<<
	I<<<< / Tuning -		Left
	>>>>I / Tuning		>>>
	>>>>I / Tuning		>>>I
	>>>>I / Tuning		Right
	Stop		Stop
	Play / Pause		Play





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
Play / Pause	Pause

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

