


**Originalfernbedienung    Ersatzfernbedienung**

|   |                |   |        |
|---|----------------|---|--------|
|    | Timer On/Sleep |    | Sleep  |
|    | FM Mode/Play   |    | TV/R   |
|    | Clock/Timer    |    | AV     |
|    | Function       |    | Menu   |
|    | 1              |    | 1      |
|    | 2              |    | 2      |
|    | 3              |    | 3      |
|    | 4              |    | 4      |
|    | 5              |    | 5      |
|    | 6              |    | 6      |
|   | 7              |   | 7      |
|  | 8              |  | 8      |
|  | 9              |  | 9      |
|  | 0              |  | 0      |
|  | Digit          |  | Pre Ch |
|  | Memory/Time    |  | Smart  |
|  | MP3/RDS        |  | Media  |

**Originalfernbedienung    Ersatzfernbedienung**

|   |                        |   |       |
|---|------------------------|---|-------|
|    | Intro/PTY              |    | Ok    |
|    | I<<</>>>/Tuning        |    | I<<<  |
|    | >>>/>>>I/Tuning        |    | >>>I  |
|    | MP3 Folder/Preset Down |    | Ch -  |
|    | MP3 Folder/Preset Up   |    | Ch +  |
|    | Stop/Band              |    | Stop  |
|    | Play                   |    | Play  |
|    | Pause                  |    | Pause |
|    | Vol+                   |    | Vol + |
|    | Vol-                   |    | Vol - |
|   | Muting                 |   | Mute  |
|  | Standby/On             |  | Power |
|   |                        |   |       |
|   |                        |   |       |
|   |                        |   |       |
|   |                        |   |       |
|   |                        |   |       |
|   |                        |   |       |
|   |                        |   |       |
|   |                        |   |       |
|   |                        |   |       |

