



 

 


 
 
 









 
 
 

 
 
 
 

 


| Originalfernbedienung | Ersatzfernbedienung |
|--|---|
|  Power |  Power |
|  Level+ |  Vol + |
|  Level- |  Vol - |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  +10 |  Guide |
|  A-B Repeat |  Options |
|  Repeat |  Text |
|  Random |  Media |

| Originalfernbedienung | Ersatzfernbedienung |
|--|---|
|  Time Mode |  Smart |
|  Open/Close |  Eject |
|  << Search |  << |
|  Search >> |  >> |
|  I<< Skip |  I<< |
|  Skip >>I |  >>I |
|  Pause |  Pause |
|  Play |  Play |
|  Stop |  Stop |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

