



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep / Timer
	Program		TV/Radio /
	Cancel		Exit / Cancel / Clear
	1		1
	2		2
	3		3
	Disc		Fav / Marker / PC
	4		4
	5		5
	6		6
	>=10 / -/--		Guide / EPG / -/--
	7		7
	8		8
	9		9
	0		0
	Test		Text / Goto

Originalfernbedienung Ersatzfernbedienung

	Pro Logic		Audio / Lang I/II
	Super SRND		Eject / Surround
	Super 3D AI EQ		Menu / Home
	Up		Up
	Left		Left
	EQ		Subtitle / EQ
	EQ		OK
	Right		Right
	CH Select		Smart / List
	Down		Down
	AV Effect		AV / Input / RDS
	Super Sound EQ		Sound / Title
	Digital S. Woofer		Setup / OPT /
	VCR / AUX / 6CH Input		Shift + 7
	VCR / AUX / 6CH Input		Shift + 4
	VCR / AUX / 6CH Input		Red / Netflix / Search
	TAPE / Deck 1/2		Shift + 5





Originalfernbedienung Ersatzfernbedienung

	TAPE / Deck 1/2		Green / APP / Repeat
	CD	+	Shift + 3
	CD		Display / Media
	CD		Yellow / YouTube / Repeat
	TUNER / Band	+	Shift + 6
	TUNER / Band		Blue / Prime Video / Random
	Pause / Rev. Play		Pause / Step / Freeze
	Stop		Stop / Hold
	Play		Play / Slow
	Muting		Mute / Dimmer
	I<< / << / Album-		I<< / Preset-
	I<< / << / Album-		<< / Tune-
	>> / >>I /		>> / Tune+
	>> / >>I /		>>I / Preset+
	Volume-		Vol-
	Volume+		Vol+

Originalfernbedienung Ersatzfernbedienung

