

 

 





 

 

 

 











 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold
	Wide		Picture / Format
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow/><		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	9		9
	0/AV		AV / Input / RDS
	0/AV		0
	i		Info / Angle
	Up		Up
	Cancel		Shift + Exit / Cancel / Clear
	Left		Left
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	OK		OK
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Lang(AD)		Audio / Lang I/II
	Subt.		Subtitle / EQ
	FAV		Fav / Marker / PC





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Tv/Radio		TV/Radio /				
	P+		CH+ / Page+				
	Vol+		Vol+				
	Guide		Guide / EPG / -/--				
	Mute		Mute / Dimmer				
	Text		Text / Goto				
	P-		CH- / Page-				
	Vol-		Vol-				

