
 


 










 



 

 








 







**Originalfernbedienung    Ersatzfernbedienung**

PWR On/Off		Power
Mute		Mute
Epg	 + 	Shift + Guide
Subt.List		Subt
Opt?		Options
App		Media
Info	 + 	Shift + Info
Sleep Timer		Sleep
TV		TV/R
Video		D. Menu
Text		Text
Zoom		Eject
TV/SAT		AV
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left

**Originalfernbedienung    Ersatzfernbedienung**


 
OK Enter		Ok
Menu Right		Right
Exit		Exit
Menu Down		Down
Back		Back
Volume+		Vol +
CH/Page+		Ch +
Audio		Dual
Volume-		Vol -
CH/Page-		Ch -
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7






 

 


 
 


 


 
 



 


 


 
 




 

 
 
**Originalfernbedienung   Ersatzfernbedienung**

8tuv		8
9wxyz		9
Guide Pilote		Guide
0/10		0
FAV Pref.		Pre Ch
Red		Red
Green		Green
West		I<<
Dev		3D
Yellow		Yellow
Freeze		Stop
Blue		Blue
On/Off	 + 	Shift + Power
SAT Sky		Smart
Home Cinema		List
East		>>I
Lang./Rewind		<<

**Originalfernbedienung   Ersatzfernbedienung**

 



 




 
 







H/V Play		Play
LNB F.Forward		>>





 

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
PWR On/Off		Power	
Mute		Mute	
Epg	 + 	Shift + Guide	
Sleep Timer		Sleep	
Opt?		Options	
App		Media	
Info	 + 	Shift + Info	
TV		TV/R	
Video		D. Menu	
Text		Text	
Zoom		Eject	
TV/SAT		AV	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Exit		Exit	
Menu Down		Down	
Back		Back	
Audio		Dual	
Volume+		Vol +	
CH/Page+		Ch +	
Volume-		Vol -	
CH/Page-		Ch -	
1. ?		1	
2abc		2	
3def		3	
4ghi		4	
5jkl		5	
6mno		6	
7pqrm		7	
8tuv		8	



**Originalfernbedienung   Ersatzfernbedienung**

9wxyz		9
Guide Pilote		Guide
0/10		0
FAV Pref.		Pre Ch
Freeze		Stop
Scan/Setup	 + 	Shift + Options
Red		Red
Auth./DISEQC		List
Green		Green
Radio	 + 	Shift + TV/R
Yellow		Yellow
Blue		Blue
Home Cinema		Smart
Alt/16:9		Format
SAT Sky	 + 	Shift + AV
Dec/Pause		Pause
	 + 	Shift + Exit

**Originalfernbedienung   Ersatzfernbedienung**

East		>>I
Lang./Rewind		<<
H/V Play		Play
LNB F.Forward		>>

