


 



 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV
	VF		Smart
	AR		Media
	SAT		Shift + TV/R
	TV / Radio		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu

Originalfernbedienung Ersatzfernbedienung

	FAV		Pre Ch
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text
	Mute		Mute
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Back		Back
	Exit		Exit
	V +		Vol +
	V -		Vol -
	P +		Ch +





Originalfernbedienung Ersatzfernbedienung

	P -		Ch -
	APP	+	Shift + Media
	EPG		Guide
	Audio		Dual
	Sub		Subt
	Info		Info
	List		List

Originalfernbedienung Ersatzfernbedienung

