







 

 

 

























Originalfernbedienung Ersatzfernbedienung

	Power		Power
	AV Set		AV / Input / RDS
	Menu		Menu / Home
	Mute		Mute / Dimmer
	Red/Timer		Red / Netflix / Search
	Green/Sub		Green / APP / Repeat
	Yellow/Audio		Yellow / YouTube / Repeat
	Blue/TXT		Blue / Prime Video / Random
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Stop		Stop / Hold
	YouTube		Shift + Yellow / YouTube /
	prime video		Shift + Blue / Prime
	Home		Shift + Menu /
	APPS		Shift + Green / APP / Repeat

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Info		Info / Angle
	Vol+		Vol+
	Google		Shift + Red / Netflix /
	P+		CH+ / Page+
	Vol-		Vol-
	DTV		Fav / Marker / PC
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4





Originalfernbedienung Ersatzfernbedienung

5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
EPG	EPG	GUIDE EPG -/-	Guide / EPG / -/-
0	0	HDMI - BAT 0	0
TV/RADIO	Tv/Radio	PROGRAM TV/RADIO	TV/Radio /

Originalfernbedienung Ersatzfernbedienung