

 

 
 
 

 
 
 

 

 

 



 



 

 
 
 
 

 

 
 


 

 
 





 
 
 

 



 

 

 

 

 

 






**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Movie		Media
	FAV/Repeat		Pre Ch
	Menu		Menu
	Lang		Dual
	EPG		Guide

**Originalfernbedienung Ersatzfernbedienung**

	Info		Info
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Rec		Rec
	Stop		Stop
	Play		Play
	Pause		Pause
	I<		I<<
	>I		>>I





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	<</Alt		<<
	>>/List		>>
	Red		Red
	Blue		Blue
	Green		Green
	Yellow		Yellow
	Text		Text
	Tv/Radio		TV/R
	Audio	+	Shift + Dual
	Subt		Subt
	Zoom		Eject
	Device		AV
	Time Shift		Format
	File		Back
	Mosaic		Smart
	A.Scan/Goto	+	Shift + Smart

