









 

 

 

 



 

 



 



 

 

 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Red		Red / Netflix / Search
	TV/SAT		TV/Radio /
	Green		Green / APP / Repeat
	TV/♪		Sound / Title
	Yellow		Yellow / YouTube / Repeat
	Zoom		Zoom / Size
	Blue		Blue / Prime Video / Random
	Pause		Pause / Step / Freeze
	Audio		Audio / Lang I/II
	EPG		Guide / EPG / -/--
	SubT		Subtitle / EQ
	Text		Text / Goto
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	M/P		Smart / List
	Mute		Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

	Up/CH+		Up
	Left		Left
	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	Down/CH-		Down
	P+		CH+ / Page+
	FAV		Fav / Marker / PC
	P-		CH- / Page-
	Recall		Back / Return
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
7	7	AUX - HDD	7
8	8	USB	8
9	9	BLUETOOTH	9
Info	Info	ANGLE	Info / Angle
0	0	HDMI - BAT	0
Timer	Timer	TIMER	Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

