

 







 
 
 
 


 
 
 





**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol +
	Vol-		Vol -
	Prog+		Ch +
	Prog-		Ch -
	Up		Up

**Originalfernbedienung Ersatzfernbedienung**

	OK		Ok
	Down		Down
	Left		Left
	Right		Right
	Menu		Menu
	Return		Back
	Tv/Radio		TV/R
	O)/A-B		Dual
	List		List

