



Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	3D	+ <b>3</b>	Shift + 3
	TV	+ <b>1</b>	Shift + 1
	TV		TV/Radio /
	1	<b>1</b>	1
	2	<b>2</b>	2
	3	<b>3</b>	3
	4	<b>4</b>	4
	5	<b>5</b>	5
	6	<b>6</b>	6
	7	<b>7</b>	7
	8	<b>8</b>	8
	9	<b>9</b>	9
	Eco		Display / Media
	0	<b>0</b>	0
	Source		AV / Input / RDS
	Vol+		Vol+









Originalfernbedienung    Ersatzfernbedienung

	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	Info		Info / Angle
	Option		Setup / OPT /
	Smart Tv		Smart / List
	Guide		Guide / EPG / -/-
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Zoom-	+	Shift + Down





Originalfernbedienung	Ersatzfernbedienung
	Zoom+  Shift + Up
	@/Home  D.Menu / Top
	Sleep  Sleep / Timer
	Pre-CH  Shift + Back / Return
	FAV  Fav / Marker / PC
	List  Shift + Smart / List
	Red  Red / Netflix / Search
	Green  Green / APP / Repeat
	Yellow  Yellow / YouTube / Repeat
	Blue  Blue / Prime Video / Random
	OO/Lang  Audio / Lang I/II
	Subtitle  Subtitle / EQ
	Text  Text / Goto
	I<  I<< / Preset-
	Stop  Stop / Hold
	Play  Play / Slow
	Pause  Pause / Step / Freeze

Originalfernbedienung	Ersatzfernbedienung
	>   >>  / Preset+
	<<  << / Tune-
	Rec  Rec / Rec Mode
	>>  >> / Tune+

