



Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|------------------------|--|-------------------------|
| | Power | | Power |
| | Vol + | | Vol + |
| | PR+ | | CH+ / Page+ |
| | Vol - | | Vol - |
| | Mute | | Mute / Dimmer |
| | Back | | Back / Return |
| | PR- | | CH- / Page- |
| | Exit | | Exit / Cancel / Clear |
| | Up | | Up |
| | Menu | | Menu / Home |
| | Left / Zoom | | Left |
| | OK | | OK |
| | Right / Zoom+ | | Right |
| | Down | | Down |
| | Text | | Text / Got o |
| | Red / [o] | | Red / Netfl ix / Search |
| | Green / Ti ner / Li st | | Green / APP / Repeat |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-------------|--|--------------------------------|
| | Yel l ow | | Yel l ow / YouT ube / Repeat |
| | I nf o | | I nf o / Angl e |
| | Bl ue / [] | | Bl ue / Pri ne Vi deo / Random |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | AV | | AV / I nput / RDS |
| | SP/ LP | | Set up / OPT / |
| | << | | << / Tune- |
| | Pl ay | | Pl ay / Sl ow |
| | >> | | >> / Tune+ |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|------------------------|--|-------------------------|
| | Power | | Power |
| | Vol + | | Vol + |
| | PR+ | | CH+ / Page+ |
| | Vol - | | Vol - |
| | Mute | | Mute / Dimmer |
| | Back | | Back / Return |
| | PR- | | CH- / Page- |
| | Exit | | Exit / Cancel / Clear |
| | Up | | Up |
| | Menu | | Menu / Home |
| | Left / Zoom | | Left |
| | OK | | OK |
| | Right / Zoom+ | | Right |
| | Down | | Down |
| | Text | | Text / Got o |
| | Red / [o] | | Red / Netfl ix / Search |
| | Green / Ti ner / Li st | | Green / APP / Repeat |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-------------|--|--------------------------------|
| | Yel l ow | | Yel l ow / YouTu be / Repeat |
| | I nf o | | I nf o / Angl e |
| | Bl ue / [] | | Bl ue / Pri ne Vi deo / Random |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | AV | | AV / I nput / RDS |
| | 0 / - / - - | | 0 |
| | SP/ LP | | Set up / OPT / |
| | << | | << / Tune- |
| | Pl ay | | Pl ay / Sl ow |



