 

 



 
 
 

 

 

 

 
 
 

 

 

 
 
 

 

 


 




Originalfernbedienung    Ersatzfernbedienung

	On		Power
	Source		AV
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	Play		Play
	Pause		Pause
	Stop		Stop
	Record		Rec
	Open/Close		Eject
	>>I		>>I
	I<<		I<<
	Mute		Mute
	Prog		Shift + Sleep

Originalfernbedienung    Ersatzfernbedienung

	Intro/CT		Ok
	Clock		Smart
	ADD		3D
	PTY		Options
	Del		Exit
	Timer		Shift + AV
	Repeat/RDS		Text
	Sleep		Sleep
	Band		Red
	FM ST		Green
	CD Info		Yellow
	Demo/Dimmer		Media
	EQ		Dual
	B.Boost		Back

