







 
 
 

 


 

 
 
 




 











Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|------------|
|  | Power |  | Power |
|  | 3D |  | 3D |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | ECO |  | Shift + 3D |
|  | Source |  | AV |
|  | Vol + |  | Vol + |
|  | Vol - |  | Vol - |
|  | Mute |  | Mute |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|---------------|
|  | Info |  | Info |
|  | P + |  | Ch + |
|  | P - |  | Ch - |
|  | W |  | Shift + Smart |
|  | Smart TV |  | Smart |
|  | @ |  | Media |
|  | Menu |  | Menu |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right / Zoom + |  | Right |
|  | Left / Zoom - |  | Left |
|  | OK |  | Ok |
|  | Back |  | Back |
|  | Exit |  | Exit |
|  | Option |  | Options |
|  | USB |  | Shift + Media |
|  | TV |  | TV/R |



