




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Eject		Eject / Surround
	Sleep		Sleep / Timer
	Dimmer/EQ		Smart / List
	I <<		I << / Preset-
	>> I		>> I / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Source		AV / Input / RDS
	Up		Up
	Down		Down
	MEM/Time		Display / Media
	Mute		Mute / Dimmer
	Vol-		Vol-
	Vol+		Vol+
	Bass-		Shift + Vol-
	Bass+		Shift + Vol+

**Originalfernbedienung    Ersatzfernbedienung**

	Treble-		CH- / Page-
	Treble+		CH+ / Page+

