



| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|---|---------------------|---|---------------------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | Fav |  | Pre Ch |
|  | List |  | List |
|  | Audio |  | Dual |
|  | Back |  | Back |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | i |  | Info |
|  | EPG |  | Guide |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Menu |  | Menu |
|  | Exit |  | Exit |
|  | V + |  | Vol + |
|  | V - |  | Vol - |
|  | CH + |  | Ch + |
|  | CH - |  | Ch - |
|  | P + |  | Shift + Ch + |
|  | P - |  | Shift + Ch - |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |





| Originalfernbedienung | | Ersatzfernbedienung | | Originalfernbedienung | | Ersatzfernbedienung | |
|---|---------|---|---------|-----------------------|--|---------------------|--|
|  | 0 |  | 0 | | | | |
|  | TV / R |  | TV/R | | | | |
|  | Home |  | Smart | | | | |
|  | Pause |  | Pause | | | | |
|  | Stop |  | Stop | | | | |
|  | << |  | << | | | | |
|  | >> |  | >> | | | | |
|  | Rec |  | Rec | | | | |
|  | Play |  | Play | | | | |
|  | I<< |  | I<< | | | | |
|  | >>I |  | >>I | | | | |
|  | OPT |  | Options | | | | |
|  | Text |  | Text | | | | |
|  | SUB |  | Subt | | | | |
|  | Message |  | 3D | | | | |
| | | | | | | | |
| | | | | | | | |

