

 
Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	TV		TV/Radio /
	Dec		D.Menu / Top
	Violet/Text		Text / Goto
	AV		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	Down		Down
	Back		Back / Return
	Vol+		Vol+
	Live		Smart / List
	PR+		CH+ / Page+
	Vol-		Vol-
	Advance		Display / Media
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8



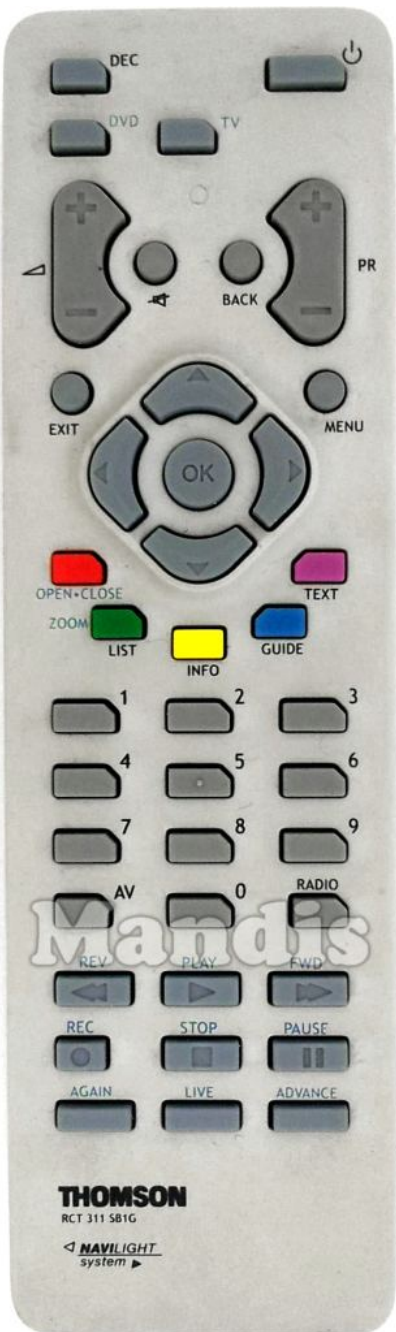 


Originalfernbedienung Ersatzfernbedienung

	9		9
	0		0
OPEN-CLOSE	Red/Open/Close	SEARCH	Red / Netflix / Search
ZOOM LIST	Green/Zoom/Lis	REPEAT	Green / APP / Repeat
INFO	Yellow/Info	REPEAT A-B	Yellow / YouTube / Repeat
GUIDE	Blue/Guide	RANDOM	Blue / Prime Video / Random
	Radio	+	Shift + TV/Radio / Program
	Again	+	Shift + Back / Return
	DVD	+	Shift + 2

Originalfernbedienung Ersatzfernbedienung

 


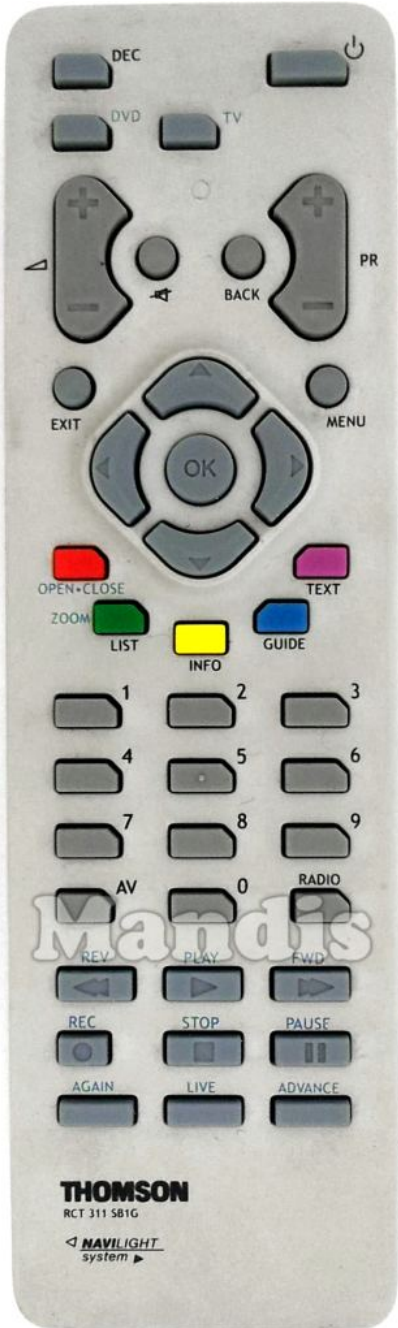


 

 

 

 



 

 



















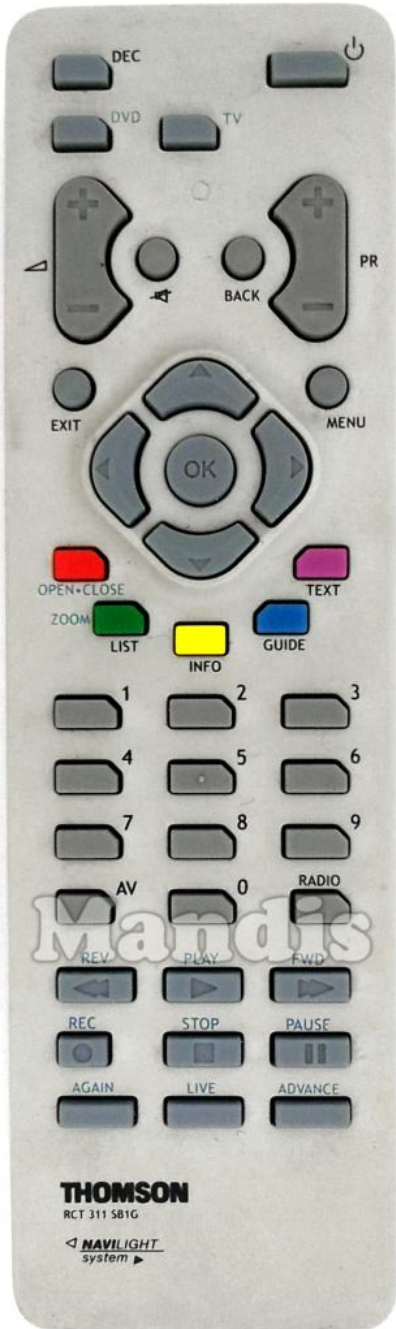 
Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	TV		TV/Radio /
	Dec		D.Menu / Top
	Violet/Text		Text / Goto
	AV		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right





 

 

 
 
 




Originalfernbedienung Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	Down		Down
	Back		Back / Return
	Vol+		Vol+
	Live		Smart / List
	PR+		CH+ / Page+
	Vol-		Vol-
	Advance		Display / Media
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8



 


Originalfernbedienung Ersatzfernbedienung

	9		9
	0		0
	Red/Open/Close		Red / Netflix / Search
	Green/Zoom/Lis		Green / APP / Repeat
	Yellow/Info		Yellow / YouTube / Repeat
	Blue/Guide		Blue / Prime Video / Random
	Radio		Shift + TV/Radio / Program
	Again		Shift + Back / Return
	DVD		Shift + 2

Originalfernbedienung Ersatzfernbedienung

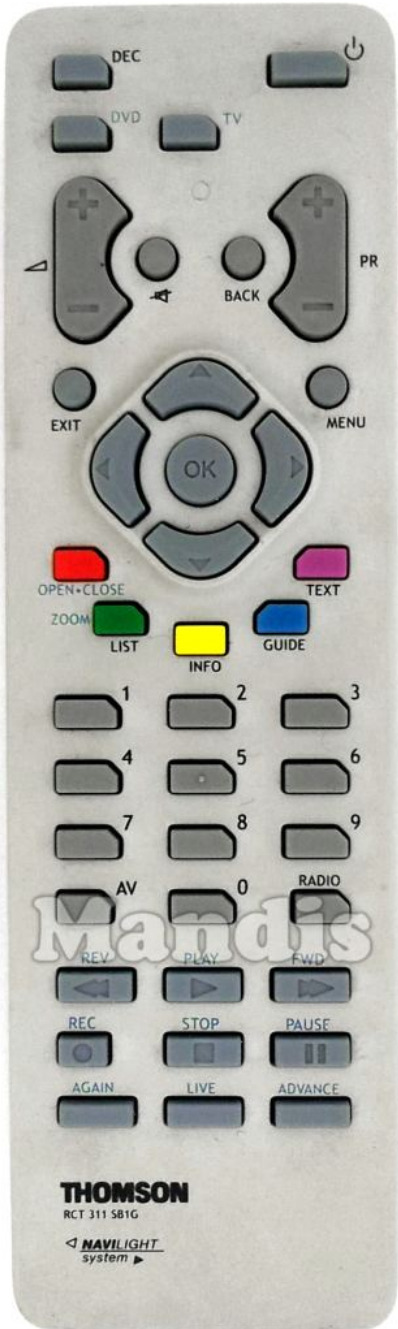

 

Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	TV		TV/Radio /
	Dec		D.Menu / Top
	Violet/Text		Text / Goto
	AV		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	Down		Down
	Back		Back / Return
	Vol+		Vol+
	Live		Smart / List
	PR+		CH+ / Page+
	Vol-		Vol-
	Advance		Display / Media
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8



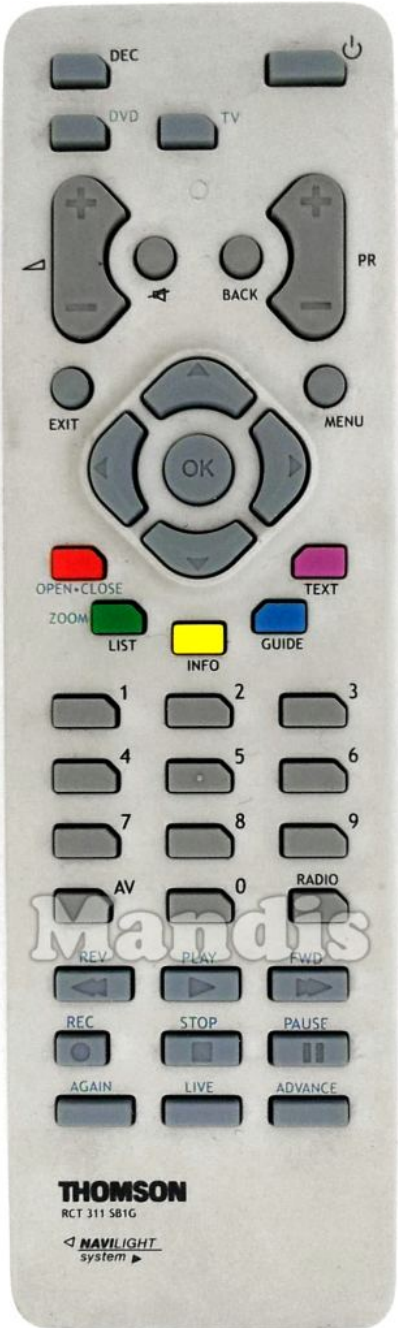

Originalfernbedienung Ersatzfernbedienung

9	9	9	9
0	0	0	0
Red/Open/Close	Red / Netflix / Search	Red / Netflix / Search	
Green/Zoom/Lis	Green / APP / Repeat	Green / APP / Repeat	
Yellow/Info	Yellow / YouTube / Repeat	Yellow / YouTube / Repeat	
Blue/Guide	Blue / Prime Video / Random	Blue / Prime Video / Random	
Radio	+ Shift + TV/Radio / Program	Shift + TV/Radio / Program	
Again	+ Shift + Back / Return	Shift + Back / Return	
DVD	+ Shift + 2	Shift + 2	

Originalfernbedienung Ersatzfernbedienung

