 




 










 
 









 

 

 









Originalfernbedienung Ersatzfernbedienung

	Input		AV / Input / RDS
	Power		Power
	→[/]←	 + 	Shift + OK
	[<>]		Picture / Format
	O/I/II	 + 	Shift + Audio / Lang I/II
	TV		TV/Radio /
	List		Smart / List
	More Info	 + 	Shift + Info / Angle
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

 



 


 
 
 



 

 
 

 



 



 



 



Originalfernbedienung Ersatzfernbedienung

	AD	 + 	Shift + AV / Input / RDS
	0		0
	Recall		Back / Return
	Vol+		Vol+
	[i+]		Info / Angle
	P+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	P-		CH- / Page-
	Quick	 + 	Shift + Exit / Cancel / Clear
	Guide		Guide / EPG / -/-
	↑	 + 	Shift + Up
	Exit		Exit / Cancel / Clear
	←	 + 	Shift + Left
	Up		Up
	→	 + 	Shift + Right
	Left		Left



 

 

 

 





 

 

 

 





Originalfernbedienung Ersatzfernbedienung

	OK		OK
	Right		Right
	Down		Down
	Menu		Menu / Home
	↓		Shift + Down
	Return		Shift + Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Text		Text / Goto
	Media Player		Display / Media
	Subtitle		Subtitle / EQ
	<</[≡+]		<< / Tune-
	Play		Play / Slow
	>>/[≡◇]		>> / Tune+
	<</[≡?]		<< / Preset-

Originalfernbedienung Ersatzfernbedienung

	Stop		Stop / Hold
	Pause/Step/[▽]		Pause / Step / Freeze
	>> /[O]/[≡x]		>>  / Preset+
	Power Regza Link		Shift + Power
	Audio Regza Link		Audio / Lang I/II
	Set Up Regza Link		Setup / OPT /
	Open/Close Regza Link		Eject / Surround
	Root Regza Link		Sleep / Timer
	Contens Regza		Shift + D.Menu / Top Menu
	Top Regza Link		D.Menu / Top
	DVD Regza Link		Shift + 2

