
 
 




 






 
 
 



 


 







Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Power ON/Off		Woofer/Speed	
Mute		CD Pause	
Tape 1 Preset		Volume+	
Tape 1 Stop		Next/Prog+	
Preset Pause		Volume-	
Vol Rs-/Effect		Tape 1 Hall/Ats	
Sleep		Prev./Prog-	
CD Random		Mode	
Tape 2 Pre./eq		Tape 1 Rew	
Repeat		Tape 1 Play	
CD/Theater		Tape 1 F.FWD	
Display		Program	
CD F.FWD		Tape 1 Rec	
CD Play			
Stop			
CD Rewind			
Funct./Direct	