 



 
 



 












 
 
 




 




Originalfernbedienung Ersatzfernbedienung

|   |                |   |                      |
|---|----------------|---|----------------------|
|    | On/Eco         |    | Sound / Title        |
|    | Mute           |    | Mute / Dimmer        |
|    | Vol+           |    | Vol+                 |
|    | EQ             |    | Subtitle / EQ        |
|    | X-Bass         |    | Eject / Surround     |
|    | Vol-           |    | Vol-                 |
|    | CD             |    | 3                    |
|    | Tuner          |    | 6                    |
|    | Tape           |    | 5                    |
|    | Preset+        |    | >>I / Preset+        |
|   | Tune CD >>I    |   | >> / Tune+           |
|  | Band · APP     |  | Smart / List         |
|  | Preset-        |  | I<< / Preset-        |
|  | I<< Tune CD    |  | << / Tune-           |
|  | Repeat1 · ALL  |  | Green / APP / Repeat |
|  | Clock·Timer    |  | Menu / Home          |
|  | Prog·Set·Clear |  | TV/Radio /           |

Originalfernbedienung Ersatzfernbedienung

|  |              |  |                       |
|--|--------------|--|-----------------------|
|   | Play/Pause   |   | Play / Slow           |
|   | Play/Pause   |   | Pause / Step / Freeze |
|   | Sleep        |   | Sleep / Timer         |
|   | ST · Mo      |   | Audio / Lang I/II     |
|   | Stop         |   | Stop / Hold           |
|   | Timer On/Off |   | Shift + Sleep / Timer |
|   | Display      |   | Display / Media       |
|   | ◇            |   | Back / Return         |
|   | Rec/Pause    |   | Rec / Rec Mode        |
|   | RDS          |   | AV / Input / RDS      |
|  | Intro        |  | Info / Angle          |
|  |              |  |                       |
|  |              |  |                       |
|  |              |  |                       |
|  |              |  |                       |
|  |              |  |                       |
|  |              |  |                       |
|  |              |  |                       |
|  |              |  |                       |
|  |              |  |                       |
|  |              |  |                       |



Program