

 

 



 

 

 







 

 





 







 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Green/Timer/List		Green / APP / Repeat
	Yellow/Info		Yellow / YouTube / Repeat
	Blue/[^]		Blue / Prime Video / Random
	Red/[o]		Red / Netflix / Search
	Up		Up
	Violet/Text		Text / Goto
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Vol+		Vol+
	Down		Down
	PR+		CH+ / Page+
	Mute		Mute / Dimmer
	Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung

	PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV		AV / Input / RDS
	0/--		0

