



Originalfernbedienung	Ersatzfernbedienung
	Power
	Picture / Format
	Eject / Surround
	Display / Media
	Shift + Sleep / Timer
	Sleep / Timer
	Stop / Hold
	Pause / Step / Freeze
	Play / Slow
	Vol+
	I<< / Preset-
	>>I / Preset+
	Vol-
	Setup / OPT /
	Subtitle / EQ
	Mute / Dimmer
	Blue / Prime Video / Random

Originalfernbedienung	Ersatzfernbedienung
	Sound / Title
	Guide / EPG / -/-

