






 

 





 

 

 





 

 










 












 



 

 



 








Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Text |  | Text |
|  | Sub |  | Subt |
|  | TV |  | Smart |
|  | TV / Rad |  | TV/R |
|  | Audio |  | Dual |


Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|--------------|
|  | Page + |  | Shift + Ch + |
|  | Page - |  | Shift + Ch - |
|  | Up / Channel + |  | Up |
|  | Up / Channel + |  | Ch + |
|  | Down / Channel - |  | Down |
|  | Down / Channel - |  | Ch - |
|  | Right / Vol + |  | Right |
|  | Right / Vol + |  | Vol + |
|  | Left / Vol - |  | Left |
|  | Left / Vol - |  | Vol - |
|  | OK |  | Ok |
|  | Freeze |  | Pause |
|  | Menu |  | Menu |
|  | Browse |  | Media |
|  | EPG |  | Guide |
|  | Exit |  | Exit |
|  | Alt |  | Back |





Originalfernbedienung Ersatzfernbedienung








 

 





 

 

 





 

 






| | | | |
|---|--------|---|--------|
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | i |  | Info |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung






















 

 







| | |
|--|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Text |  | Text |
|  | Sub |  | Subt |
|  | TV |  | Smart |
|  | TV / Rad |  | TV/R |
|  | Audio |  | Dual |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|--------------|
|  | Page + |  | Shift + Ch + |
|  | Page - |  | Shift + Ch - |
|  | Up / Channel + |  | Up |
|  | Up / Channel + |  | Ch + |
|  | Down / Channel - |  | Down |
|  | Down / Channel - |  | Ch - |
|  | Right / Vol + |  | Right |
|  | Right / Vol + |  | Vol + |
|  | Left / Vol - |  | Left |
|  | Left / Vol - |  | Vol - |
|  | OK |  | Ok |
|  | Freeze |  | Pause |
|  | Menu |  | Menu |
|  | Browse |  | Media |
|  | EPG |  | Guide |
|  | Exit |  | Exit |
|  | Alt |  | Back |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|--------|
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | i |  | Info |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

