
 


 



 



 



 


 

 






 

 


 




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV
	ATV/DTV/Content Menu		Smart
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -

**Originalfernbedienung    Ersatzfernbedienung**

	Mute		Mute
	Guide/Top		Media
	Exit/Return		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu/DVD		Menu
	Tv/FAV/Radio/Set		TV/R
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[<>]		Format
	<[ / ]>		3D
	Subtitle		Subt

 





 

 

 
 

 

 
 

 

 

 

 





 











Originalfernbedienung    Ersatzfernbedienung

	←[/]→		3D
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Exit/Return		Exit

Originalfernbedienung    Ersatzfernbedienung

	Menu/DVD		Menu
	Tv/FAV/Radio/Set		TV/R
	Guide/Top		Guide
	[<>]		Format
	Text		Text
	Subtitle		Subt
	O)/II		Dual
	[i+]/[≡i]		Info
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	II/II>/[▼]		Pause
	Play/[≡o]		Play
	Stop		Stop
	Eject		Eject



 

 

 

 
 

 
 
 
 

 

 

 

 
 


 

 









 

 

 

 
 
 


 
 

 

 

 
 
 
 

 
 
 

 
 

 







**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	←[/]→		3D
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV
	ATV/DTV/Content Menu		Smart
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +

**Originalfernbedienung    Ersatzfernbedienung**

	P-		Ch -
	Mute		Mute
	Guide/Top		Guide
	Exit/Return		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu/DVD		Menu
	Tv/FAV/Radio/Set		TV/R
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text
	[<>]		Format



