




 











 
 


 

 
 
 
 


 



 



 
 
 

 






Originalfernbedienung Ersatzfernbedienung

 
 
 
	Power		Power
	Open/Close		Eject
	Setup		Options
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Top Menu		Menu
	Pop Up Menu		Media
	MC		Shift + Guide

Originalfernbedienung Ersatzfernbedienung

	Return		Back
	OK		Ok
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Repeat		Text
	A-B		Shift + Play
	Display		Info
	Goto		D. Menu
	Play/Pause		Play
	I>/II>		Pause
	<</<<I		<<
	>>/I>>		>>
	Stop		Stop
	>>I		>>I
	I<<		I<<





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Subtitle		Subt				
	Audio		Dual				
	HDMI		AV				
	PIP		Format				
	PIP Audio		3D				
	Red/Program		Red				
	Green/Digest		Green				
	Yellow/Zoom		Yellow				
	Blue/Bookmark		Blue				
	OSC		Guide				
	Angle		Pre Ch				

