




 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	Source		AV
	Menu/DVD		Menu
	Guide		Guide
	[■] [■■■]		3D

Originalfernbedienung Ersatzfernbedienung

	Exit/Back		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	[<<>]		Format
	→ □ ←		TV/R
	[i+] / [≡ i]		Info
	Text / [≡] [/ ≡] []		Text
	▄▄▄▄▶ / ▾		Pause
	▶ / I/II		Play
	▶ / I/II		Dual





Originalfernbedienung **Ersatzfernbedienung**





 

 



 



 



	⏩ / [≡▶]		<<
	⏩ / [≡▶]		Options
	▶▶ / Subtitle		Subt
	▶▶ / Subtitle		>>
	▲		Smart
	■ / [≡◻]		Stop
	⏪ / [≡↕]		Eject
	⏪ / [≡↕]		I<<
	▶▶ / [⊙][≡X]		>>I
	▶▶ / [⊙][≡X]		Back
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung **Ersatzfernbedienung**





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	_ Menu/DVD		Menu
	- Exit/Back		Exit
	- Up		Up
	Left		Left
	OK		Ok












 


Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	⏸ / [⏸]		Pause
	▶ / I/II		Play
	▶ / I/II		Dual
	⏮ / [≡⏮]		<<
	⏮ / [≡⏮]		TV/R
	▶▶ / Subtitle		>>
	▶▶ / Subtitle		Subt
	▲		Smart
	■ / [≡■]		Stop
	⏏ / [≡⏏]		Eject
	⏭ / [≡⏭]		I<<
	▶▶ / [⊕][≡X]		>>I
	▶▶ / [⊕][≡X]		Back





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	- 7		7
	- 8		8
	- 9		9
	0		0
	Source		AV
	P+		Ch +
	P-		Ch -
	Vol-		Vol -
	Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung

	⏸ / [▼]		Pause
	▶ / I/II		Play
	▶ / I/II		Dual
	⏩ / [≡●]		<<
	⏩ / [≡●]		TV/R
	▶▶ / Subtitle		>>
	▶▶ / Subtitle		Subt
	▲		Smart
	■ / [≡□]		Stop
	⏪ / [≡⇅]		Eject
	⏪ / [≡⇅]		I<<
	▶▶ / [⊙][≡X]		Back
	▶▶ / [⊙][≡X]		>>I

