 





 

 







 


 

 

 






Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Open/Close		Eject
	Input Select		AV
	HDMI		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Setup		Options
	Clear		Exit
	Prog+		Ch +

Originalfernbedienung Ersatzfernbedienung

	Prog-		Ch -
	Timer Prog		Sleep
	Variable Replay		Pre Ch
	Variable Skip		Shift + Pre Ch
	Top Menu		Menu
	Disc Menu		D. Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Display		Info
	Return		Shift + Back
	Mode		Yellow
	Search		Blue
	<<		<<
	Play		Play





Originalfernbedienung Ersatzfernbedienung

	>>		>>
	<<		<<
	Stop		Stop
	>>		>>
	Pause		Pause
	VCR	 SHIFT + 1	Shift + 1
	HDD	 SHIFT + 2	Shift + 2
	DVD	 SHIFT + 3	Shift + 3
	Time Slip	 SHIFT + 	Shift + Sleep
	Dubbing	 RETURN 	Back
	Rec Mode	 SHIFT + 	Shift + Rec
	Rec	 REC MODE	Rec
	Subtitle	 AD 	Subt
	1.3x/0.8x PPlay	 PICTURE 	Format
	O))/Audio	 SOUND 	Dual
	Sat Link	 ECO 	3D

Originalfernbedienung Ersatzfernbedienung

