


 














 












Originalfernbedienung Ersatzfernbedienung

	Tv/Video		TV/Radio /
	I.Select		Smart / List
	On/Standby		Power
	1		1
	2		2
	3		3
	CH/TRK+		CH+ / Page+
	4		4
	5		5
	6		6
	CH/TRK-		CH- / Page-
	7		7
	8		8
	9		9
	→		Right
	Display		Display / Media
	0		0

Originalfernbedienung Ersatzfernbedienung

	OSP		Info / Angle
	←		Left
	Rec		Rec / Rec Mode
	Timer		Sleep / Timer
	Cancel		Exit / Cancel / Clear
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	I>/Slow		Shift + Play /
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Index-		Down
	Index+		Up
	C.Reset		Back / Return
	Counter		Zoom / Size
	SP/LP		Picture / Format
	A3		Blue / Prime Video / Random



