



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	OSD		Display / Media
	Open / Close		Eject / Surround
	N/P		Picture / Format
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	RAN		Smart / List
	L/R		D.Menu / Top
	Slow		Shift + Play /
	Resume		Shift + Right
	Step		Shift + Pause / Step /
	Key+		CH+ / Page+
	Return		Back / Return
	3D		Shift + 3
	Vol+		Vol+
	Key-		CH- / Page-
	Time		Sleep / Timer

**Originalfernbedienung    Ersatzfernbedienung**

	PDVD		AV / Input / RDS
	Vol-		Vol-
	Language		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Angle		Info / Angle
	Prog		TV/Radio /
	Setup		Setup / OPT /
	Up		Up
	Title		Sound / Title
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Zoom		Zoom / Size
	Play		Play / Slow
	Pause		Pause / Step / Freeze



