






















 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV / Video		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide / EPG / -/--
	Quick		Back / Return
	Mute		Mute / Dimmer
	Sleep		Sleep / Timer
	Skip		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

	Display		Display / Media
	Up / Prog+		Up
	Up / Prog+		CH+ / Page+
	Left / Vol-		Left
	Left / Vol-		Vol-
	Menu		Menu / Home
	Menu		OK
	Right / Vol+		Right
	Right / Vol+		Vol+
	Down / Prog-		Down
	Down / Prog-		CH- / Page-
	C-Temp		Info / Angle
	P-STD		Picture / Format
	Auto Search		Red / Netflix / Search
	Wide		Zoom / Size
	OSD Position		Green / APP / Repeat
	OSD Language		Yellow / YouTube / Repeat





Originalfernbedienung Ersatzfernbedienung

S-STD	S-STD	TITLE SOUND	Sound / Title
M/S	M/S	LANG I/II AUDIO	Audio / Lang I/II
EQ	EQ	EQ SUBTITLE	Subtitle / EQ
SURROUND	SURROUND	SURROUND ▲	Eject / Surround

Originalfernbedienung Ersatzfernbedienung