



**Originalfernbedienung    Ersatzfernbedienung**

|   |        |   |       |
|---|--------|---|-------|
|    | Power  |    | Power |
|    | Mute   |    | Mute  |
|    | 1      |    | 1     |
|    | 2      |    | 2     |
|    | 3      |    | 3     |
|    | 4      |    | 4     |
|    | 5      |    | 5     |
|    | 6      |    | 6     |
|    | 7      |    | 7     |
|    | 8      |    | 8     |
|    | 9      |    | 9     |
|  | 0      |  | 0     |
|  | SAT    |  | Smart |
|  | Zoom   |  | Eject |
|  | FAV+   |  | >>    |
|  | FAV-   |  | <<    |
|  | Up/CH+ |  | Up    |

**Originalfernbedienung    Ersatzfernbedienung**

|   |          |   |        |
|---|----------|---|--------|
|    | Down/CH- |    | Down   |
|    | Vol+     |    | Vol +  |
|    | Right    |    | Right  |
|    | Left     |    | Left   |
|    | Vol-     |    | Vol -  |
|    | OK       |    | Ok     |
|    | Exit     |    | Exit   |
|    | Audio    |    | Dual   |
|    | Red      |    | Red    |
|    | Menu     |    | Menu   |
|   | PgUp     |   | Ch +   |
|  | PgDn     |  | Ch -   |
|  | FAV      |  | Pre Ch |
|  | EPG      |  | Guide  |
|  | Tv/Radio |  | TV/R   |
|  | Green    |  | Green  |
|  | Recall   |  | Back   |





Originalfernbedienung Ersatzfernbedienung

|  |        |  |        |
|--|--------|--|--------|
|  | Yellow |  | Yellow |
|  | Pause  |  | Pause  |
|  | Blue   |  | Blue   |
|  | Info   |  | Info   |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |


 



 
 
Originalfernbedienung Ersatzfernbedienung

|  |  |
|--|--|
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |





Originalfernbedienung Ersatzfernbedienung

|   |        |   |       |
|---|--------|---|-------|
|    | Power  |    | Power |
|    | Mute   |    | Mute  |
|    | 1      |    | 1     |
|    | 2      |    | 2     |
|    | 3      |    | 3     |
|    | 4      |    | 4     |
|    | 5      |    | 5     |
|    | 6      |    | 6     |
|    | 7      |    | 7     |
|    | 8      |    | 8     |
|  | 9      |  | 9     |
|  | 0      |  | 0     |
|  | SAT    |  | Smart |
|  | Zoom   |  | Eject |
|  | FAV+   |  | >>I   |
|  | FAV-   |  | I<<   |
|  | Up/CH+ |  | Up    |









Originalfernbedienung Ersatzfernbedienung

|   |          |   |        |
|---|----------|---|--------|
|    | Down/CH- |    | Down   |
|    | Vol+     |    | Vol +  |
|    | Right    |    | Right  |
|    | Left     |    | Left   |
|    | Vol-     |    | Vol -  |
|    | OK       |    | Ok     |
|    | Exit     |    | Exit   |
|    | Audio    |    | Dual   |
|    | Menu     |    | Menu   |
|    | Red      |    | Red    |
|  | PgUp     |  | Ch +   |
|  | PgDn     |  | Ch -   |
|  | FAV      |  | Pre Ch |
|  | EPG      |  | Guide  |
|  | Tv/Radio |  | TV/R   |
|  | Green    |  | Green  |
|  | Recall   |  | Back   |





Originalfernbedienung Ersatzfernbedienung



 
 
|   |        |   |        |
|---|--------|---|--------|
|  | Yellow |  | Yellow |
|  | Pause  |  | Pause  |
|  | Blue   |  | Blue   |
|  | Info   |  | Info   |
|   |        |   |        |
|   |        |   |        |
|   |        |   |        |
|   |        |   |        |
|   |        |   |        |
|   |        |   |        |
|   |        |   |        |
|   |        |   |        |
|   |        |   |        |
|   |        |   |        |
|   |        |   |        |
|   |        |   |        |
|   |        |   |        |
|   |        |   |        |
|   |        |   |        |
|   |        |   |        |

Originalfernbedienung Ersatzfernbedienung

|  |  |
|--|--|
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |




**Originalfernbedienung    Ersatzfernbedienung**

|   |        |   |       |
|---|--------|---|-------|
|    | Power  |    | Power |
|    | Mute   |    | Mute  |
|    | 1      |    | 1     |
|    | 2      |    | 2     |
|    | 3      |    | 3     |
|    | 4      |    | 4     |
|    | 5      |    | 5     |
|    | 6      |    | 6     |
|    | 7      |    | 7     |
|    | 8      |    | 8     |
|    | 9      |    | 9     |
|    | 0      |    | 0     |
|  | SAT    |  | Smart |
|  | Zoom   |  | Eject |
|  | FAV+   |  | >>I   |
|  | FAV-   |  | I<<   |
|  | Up/CH+ |  | Up    |


 



 


**Originalfernbedienung    Ersatzfernbedienung**

|   |          |   |        |
|---|----------|---|--------|
|    | Down/CH- |    | Down   |
|    | Right    |    | Right  |
|    | Vol+     |    | Vol +  |
|    | Vol-     |    | Vol -  |
|    | Left     |    | Left   |
|    | OK       |    | Ok     |
|    | Exit     |    | Exit   |
|    | Audio    |    | Dual   |
|    | Red      |    | Red    |
|    | Menu     |    | Menu   |
|    | PgUp     |    | Ch +   |
|    | PgDn     |    | Ch -   |
|  | FAV      |  | Pre Ch |
|  | EPG      |  | Guide  |
|  | Tv/Radio |  | TV/R   |
|  | Green    |  | Green  |
|  | Recall   |  | Back   |





Originalfernbedienung Ersatzfernbedienung

|   |        |   |        |
|---|--------|---|--------|
|  | Pause  |  | Pause  |
|  | Yellow |  | Yellow |
|  | Info   |  | Info   |
|  | Blue   |  | Blue   |
|   |        |   |        |
|   |        |   |        |
|   |        |   |        |
|   |        |   |        |
|   |        |   |        |
|   |        |   |        |
|   |        |   |        |
|   |        |   |        |
|   |        |   |        |
|   |        |   |        |
|   |        |   |        |
|   |        |   |        |
|   |        |   |        |
|   |        |   |        |
|   |        |   |        |

Originalfernbedienung Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

