















 

 


















 





 

 

 







 


 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	FAV		Fav / Marker / PC
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-		Shift + Guide / EPG / -/-

Originalfernbedienung Ersatzfernbedienung

	Recall		Back / Return
	Vol+		Vol+
	CH.List		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	Aspect		Shift + Picture / Format
	CH-		CH- / Page-
	EPG		Guide / EPG / -/-
	Audio		Audio / Lang I/II
	Rec		Rec / Rec Mode
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Source		AV / Input / RDS



