 





 












 

 







 







 

 

 

 

 

 

 

 

 

 

 

 

 

 

 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|---|-----------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | Play/Pause/Hold |  | Play / Slow |
|  | Pause |  | Pause / Step / Freeze |
|  | Stop/Size |  | Stop / Hold |
|  | Rec Menu |  | Rec / Rec Mode |
|  | << |  | << / Tune- |
|  | >> / Cancel |  | >> / Tune+ |
|  | I<< / Index |  | I<< / Preset- |
|  | >>I/Reveal |  | >>I / Preset+ |
|  | Nicam |  | Audio / Lang I/II |
|  | Subtitle |  | Subtitle / EQ |
|  | Aspect |  | Picture / Format |
|  | Sleep |  | Sleep / Timer |
|  | Tv |  | TV/Radio / |
|  | Subpage |  | D.Menu / Top |
|  | PC Auto |  | Setup / OPT / |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|-----------------------|
|  | Text |  | Text / Goto |
|  | Source |  | AV / Input / RDS |
|  | Menu |  | Menu / Home |
|  | Up |  | Up |
|  | ?? |  | Info / Angle |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Exit |  | Exit / Cancel / Clear |
|  | Down |  | Down |
|  | Back |  | Back / Return |
|  | Vol+ |  | Vol+ |
|  | List |  | Smart / List |
|  | CH+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Display |  | Display / Media |
|  | CH- |  | CH- / Page- |




Originalfernbedienung Ersatzfernbedienung

| | | | | |
|--|--------|--|-----------------------------|-------------------------------|
| | 1 | | 1 | |
| | 2 | | 2 | |
| | 3 | | 3 | |
| | 4 | | 4 | |
| | 5 | | 5 | |
| | 6 | | 6 | |
| | 7 | | 7 | |
| | 8 | | 8 | |
| | 9 | | 9 | |
| | TVG | | Guide / EPG / -/-- | |
| | 0 | | 0 | |
| | FAV | | Fav / Marker / PC | |
| | Red | | Red / Netflix / Search | |
| | Green | | Green / APP / Repeat | |
| | Yellow | | Yellow / YouTube / Repeat | |
| | Blue | | Blue / Prime Video / Random | |
| | Freeze | | | Shift + Pause / Step / Freeze |

Originalfernbedienung Ersatzfernbedienung

| | | | | |
|--|-----------|--|--|---------------------------------------|
| | DTV/Radio | | | Shift + TV/Radio / Program |
| | Media | | | Shift + Display / Media |
| | -/-- | | | Shift + Guide / EPG / -/-- |
| | Repeat | | | Shift + Green / APP / Repeat |
| | A-B | | | Shift + Yellow / YouTube / Repeat A-B |

