


 
 

 

 

 
 


 

 
 

 







 










**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	Mute		Mute
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Aspect		Format
	Sleep		Sleep
	TTX		Text
	Index		List
	Subtitle		Subt
	Audio/I-II		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

 

 

 



 

 




 
 
 



 

 
 



**Originalfernbedienung    Ersatzfernbedienung**

	8		8
	9		9
	0/10		0
	-/--/+10		Guide
	Recall/Program		Pre Ch
	Menu		Menu
	Source		AV
	i/Display		Info
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +

 







Originalfernbedienung Ersatzfernbedienung

	CH-		Ch -
	Red/D.Setup		Red
	Green/D.Menu		Green
	Yellow/T.List/Title		Yellow
	Blue/R.List/D.Display		Blue
	Open/Close/Mix		Eject
	Goto/Hold		Media
	A-B/Reveal		Options
	Zoom/Size		Shift + Eject
	Subpage		Back
	Tv/Radio		TV/R
	Rec/Repeat		Rec
	Stop		Stop
	Play		Play
	Pause		Pause
	<</List		<<
	>>		>>

Originalfernbedienung Ersatzfernbedienung

	I<<		I<<
	>>I/FAV		>>I

