 





 

 

 





 

 



 





 

 

 


 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|--------------------|
|  | Mute |  | Mute / Dimmer |
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | Sleep |  | Sleep / Timer |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | Still |  | Eject / Surround |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Aspect |  | Zoom / Size |
|  | -/-- |  | Guide / EPG / -/-- |
|  | 0 |  | 0 |
|  | Prev. Ch. |  | Back / Return |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|-----------------------|
|  | Source |  | AV / Input / RDS |
|  | Vol - |  | Vol- |
|  | Vol + |  | Vol+ |
|  | CH - |  | CH- / Page- |
|  | CH + |  | CH+ / Page+ |
|  | Info |  | Info / Angle |
|  | Nicam/A2 / Audio |  | Audio / Lang I/II |
|  | Auto |  | Setup / OPT / |
|  | P.Mode |  | Picture / Format |
|  | Up |  | Up |
|  | Menu |  | Menu / Home |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | S.Mode |  | Sound / Title |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |











Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------|---|-----------------------------|
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | I<< / Index |  | I<< / Preset- |
|  | >>I / Cancel |  | >>I / Preset+ |
|  | << / Reveal |  | << / Tune- |
|  | >> / Hold |  | >> / Tune+ |
|  | Txt |  | Text / Goto |
|  | Play/Pause / Size |  | Play / Slow |
|  | Play/Pause / Size |  | Pause / Step / Freeze |
|  | Stop / Subpage |  | Stop / Hold |
|  | Subtitle |  | Subtitle / EQ |
|  | Rec Menu |  | Shift + Rec / Rec Mode |
|  | CH List |  | Smart / List |
|  | FAV |  | Fav / Marker / PC |
|  | USB |  | Shift + 8 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|----------------|
|  | DTV / Radio |  | TV/Radio / |
|  | DTV |  | D.Menu / Top |
|  | REC / Repeat |  | Rec / Rec Mode |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

