 



























 








**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	Auto		Smart / List
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide / EPG / -/--
	Recall		Back / Return
	Vol+		Vol+
	Vol-		Vol-




**Originalfernbedienung    Ersatzfernbedienung**

	Aspect		Shift + Picture / Format
	Nicam		Audio / Lang I/II
	Display		Display / Media
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	LCD Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Input		AV / Input / RDS
	PMode		Picture / Format
	SMode		Sound / Title
	Sleep		Sleep / Timer
	Fav		Fav / Marker / PC





Originalfernbedienung Ersatzfernbedienung

	Fav-		I<< / Preset-
	EPG		Guide / EPG / -/-
	Text		Text / Goto
	Fav+		>>I / Preset+
	Hold		Stop / Hold
	Lang	 + 	Shift + Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Index		Info / Angle
	Size		Zoom / Size
	Reveal		TV/Radio /
	Subpage		Eject / Surround
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung