








 

 

 







 

 

 





 






Originalfernbedienung Ersatzfernbedienung










 



 

 







 



 






	Power		Power
	Timer		Sleep
	Timer		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	<		Left
	>		Right
	Red		Red
	Green		Green

Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Blue		Blue
	Menu		Menu
	Info		Info
	Up		Up
	Left		I<<
	OK		Ok
	Right		>>I
	Down		Down
	Guide		Guide
	PVR		Smart
	Plugin		3D
	Exit		Exit
	PIP		Format
	Vol+		Vol +
	Vol-		Vol -
	Audio		Dual





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Mute		Mute		Help		D. Menu
	CH+		Ch +				
	CH-		Ch -				
	REW		<<				
	Play / Pause		Play				
	Play / Pause		Pause				
	FF		>>				
	Rec		Rec				
	File List		List				
	Stop		Stop				
	Radio / TV		TV/R				
	FAV		Pre Ch				
	Subt		Subt				
	Text		Text				
	www		Media				
	Setup		Options				
	LAN		Eject				

