


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Menu		Menu
	Title		List
	Setup		Options
	Angle		Red
	Repeat		Text
	A-B Repeat		TV/R
	Slow		Pre Ch
	File Info		Info
	Time Search		AV
	Brt. Cont.		Green
	Media Type		Media
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok

Originalfernbedienung Ersatzfernbedienung

	Main Page		Smart
	Play		Play
	Pause		Pause
	Stop		Stop
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Video		Yellow
	Audio		Dual
	Subtitle		Subt
	Scr Size		Format
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	1		1
	2		2



