



 







 





 







 





 



 









 










 






 









 
Originalfernbedienung	Ersatzfernbedienung
 Power	 Power
 Source	 AV / Input / RDS
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Nothing	 Info / Angle
 Scan	 Smart / List
 Red	 Red / Netflix / Search
 Zoom	 Zoom / Size

Originalfernbedienung	Ersatzfernbedienung
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Subtitle	 Subtitle / EQ
 Blue	 Blue / Prime Video / Random
 Audio	 Audio / Lang I/II
 FAV	 Fav / Marker / PC
 Up	 Up
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Left	 Left
 Enter	 OK
 Right	 Right
 Mode	 Picture / Format
 Setup	 Setup / OPT /
 Down	 Down
 TTX	 Text / Goto





Originalfernbedienung Ersatzfernbedienung

EPG	EPG		Guide / EPG / -/--
REPEAT	Repeat	 +  	Shift + Green / APP /
V/RADIO	Tv/Radio		TV/Radio /
	I<<		I<< / Preset-
	>>I		>>I / Preset+
EXIT	Exit		Exit / Cancel / Clear
DISPLAY	Display		Display / Media
	<<		<< / Tune-
	>>		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

