


















Originalfernbedienung Ersatzfernbedienung

Power		Power
Mute		Mute / Dimmer
Menu		Menu / Home
Exit		Exit / Cancel / Clear
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
+10		Guide / EPG / -/--
Display		Display / Media
Zoom		Zoom / Size

Originalfernbedienung Ersatzfernbedienung

Setup		Setup / OPT /
Subtitle		Subtitle / EQ
Vol+		Vol+
Vol-		Vol-
>>		>> / Preset+
<<		<< / Preset-
Up		Up
Left		Left
OK		OK
Right		Right
Down		Down
Canc		Back / Return
DVI		AV / Input / RDS
Info		Info / Angle
Title		Sound / Title
Bookmark		Fav / Marker / PC
Eject		Eject / Surround



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Pause	 Pause / Step / Freeze		
Stop	 Stop / Hold		
Angle	 +  Shift + Info / Angle		
<<	 << / Tune-		
Play	 Play / Slow		
>>	 >> / Tune+		
Audio	 Audio / Lang I/II		
PSM	 Picture / Format		
Keyboard	 Smart / List		
I-Scan	 CH+ / Page+		
P-Scan	 CH- / Page-		
P/N	 D.Menu / Top		
Slow	 +  Shift + Play /		
Repeat	 Green / APP / Repeat		
Repeat A-B	 Yellow / YouTube / Repeat		

