

 







 







 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Program		TV/Radio /
	Open/Close		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide / EPG / -/-
	Play		Play / Slow
	C		Exit / Cancel / Clear
	I<< Skip/Frame		I<< / Preset-

Originalfernbedienung Ersatzfernbedienung

	<< Slow/Search		<< / Tune-
	Slow/Search >>		>> / Tune+
	Skip/Frame >>I		>>I / Preset+
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Title		Sound / Title
	Menu		Menu / Home
	Display		Display / Media
	Search Mode		Red / Netflix / Search
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Select		OK
	Return		Back / Return
	Zoom		Zoom / Size
	Subtitle		Subtitle / EQ





Originalfernbedienung Ersatzfernbedienung

	Audio	 LANG I/II	Audio / Lang I/II
	Angle	 INFO	Info / Angle
	Time		Sleep / Timer
	Repeat		Green / APP / Repeat
	A→B		Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

