



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		Guide / EPG / -/--
	0		0
	Recall		Fav / Marker / PC
	YouTube		Shift + Yellow / YouTube / REPEAT A-B
	Vudu		Shift + Green / APP / REPEAT
	Pandora		Shift + Blue / Prime Video / RANDOM

Originalfernbedienung Ersatzfernbedienung

	Netflix		Shift + Red / Netflix /
	Menu		Menu / Home
	Source		AV / Input / RDS
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Return		Back / Return
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Vol-		Vol-
	Aspect		Zoom / Size
	CH+		CH+ / Page+
	CH-		CH- / Page-
	TV		TV/Radio /
	<<		<< / Tune-





Originalfernbedienung **Ersatzfernbedienung**

	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	I<<		I<< / Preset-
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Red/Info		Red / Netflix / Search
	Green/Freeze		Green / APP / Repeat
	Yellow/ADD/Erased		Yellow / YouTube / Repeat
	Blue/FAV		Blue / Prime Video / Random
	V-Chip		Eject / Surround
	CC		Subtitle / EQ
	MTS		Info / Angle
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	CH.List		Smart / List

Originalfernbedienung **Ersatzfernbedienung**

