

 







 

 

 


 




 







**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Up / P+		Up
	Up / P+		CH+ / Page+
	Menu		Menu / Home
	Left		Left
	Right		Right
	Down / P-		Down
	Down / P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

**Originalfernbedienung    Ersatzfernbedienung**

	Guide / EPG / -/--		Guide / EPG / -/--
	0		0
	P < P		Fav / Marker / PC
	PP		Back / Return
	Vol+		Vol+
	I-II		Audio / Lang I/II
	Mute		Mute / Dimmer
	Vol-		Vol-
	Info		Info / Angle
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[TV]		Shift + 1
	[TV]		TV/Radio /
	[AV]		AV / Input / RDS
	[ ≡ ]		Text / Goto





**Originalfernbedienung    Ersatzfernbedienung**

Power

DIMMER  
MUTE

SHIFT

TV SLOW STEP-FREEZE HOLD REC MODE

DVD DVD DVD DVD

SAT SAT SAT SAT

AUX AUX AUX AUX

TUNE- TUNE+ PRESET- PRESET+

◀ ▶ ◀ ▶

TITLE LANG VBI EQ SURROUND

SOUND AUDIO SUBTITLE

FORMAT SIZE TIMER PROGRAM

PICTURE ZOOM SLEEP TV RADIO

TOP MENU OPT-TOOLS GOTO RDS

D.MENU SETUP TEXT AV INPUT

HOME ANGLE

MENU INFO

OK

CLEAR RETURN

EXIT BACK

CANCEL

LIST

SMART

MEDIA

DISPLAY

TV DVD CD-STD

1 2 3

VIDEO TAPE TUNER

4 5 6

AUX-HDD USB BLUETOOTH

7 8 9

←→ HDMI-BAT PC

GUIDE 0 FAV MARKER

EPG

NETFLIX APP YouTube Prime Video

SEARCH REPEAT REPEAT A-B RANDOM

Mandis




 
 




 


shop

www.mandis.tv

 





 
 

 
 
 


 



 



 















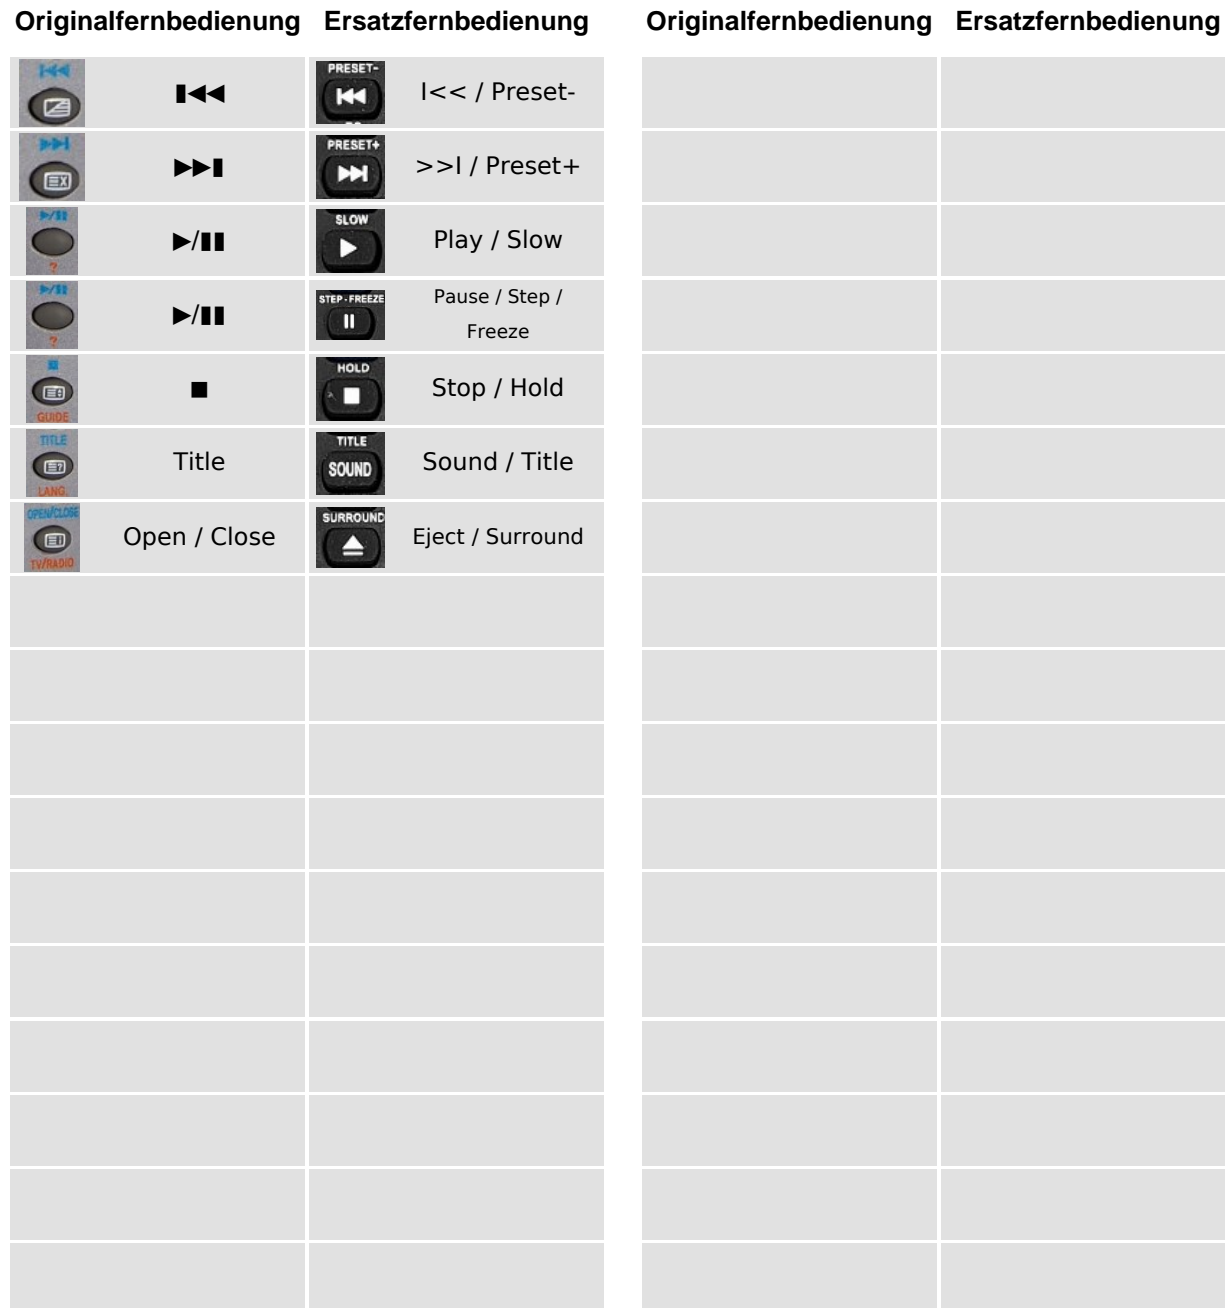 
Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Up / P+		Up
	Up / P+		CH+ / Page+
	Menu		Menu / Home
	Left		Left
	Select		OK
	Right		Right
	Down / P-		CH- / Page-
	Down / P-		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	+10		Guide / EPG / -/-
	0		0
	Repeat		Green / APP / Repeat
	Search		Red / Netflix / Search
	A→B		Yellow / YouTube / Repeat
	Display		Display / Media
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Zoom		Zoom / Size
	Prog		TV/Radio /
	C		Blue / Prime Video / Random
	Angle		Info / Angle
	Return		Back / Return
	Time		Sleep / Timer
	◀		◀ / Tune-
	▶		▶ / Tune+











































Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Mute		Mute / Dimmer
Txt Stop		Stop / Hold
Tone+		>> / Tune+
Lang		Sound / Title
Menu audio		Audio / Lang I/II
Subt.List		Subtitle / EQ
Txt Expand		Zoom / Size
Sleep Timer		Sleep / Timer
Return TV		TV/Radio /
Menu video		D.Menu / Top
Text		Text / Goto
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK

Originalfernbedienung Ersatzfernbedienung

Menu Right		Right
Menu Down		Down
Back		Back / Return
Volume+		Vol+
Chan.Up		CH+ / Page+
Volume-		Vol-
Display		Display / Media
Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9





<b>Originalfernbedienung</b>	<b>Ersatzfernbedienung</b>
	
	

**Power** **DIMMER MUTE** **SHIFT**

**TV** **DVD** **SAT** **AUX**  
 SLOW STEP-FREEZE HOLD REC MODE

**Play** **Pause** **Stop** **Record**  
 TUNE- TUNE+ PRESET- PRESET+

**Left Arrow** **Right Arrow** **Double Left Arrow** **Double Right Arrow**  
 TITLE LANG VIII EQ SURROUND

**SOUND** **AUDIO** **SUBTITLE** **Program**  
 FORMAT SIZE TIMER PROGRAM

**Picture** **ZOOM** **SLEEP** **TV RADIO**  
 TOP MENU OPT-TOOLS GOTO RDS

**D.MENU** **SETUP** **TEXT** **AV INPUT**

**HOME** **ANGLE**  
**MENU** **INFO**

**OK** **Return**

**Clear** **EXIT** **CANCEL** **BACK**

**+** **LIST** **+**  
**VOL** **SMART** **CH PAGE**  
**-** **MEDIA** **-**  
**DISPLAY**

**TV** **DVD** **CD-STD**  
**1** **2** **3**  
**VIDEO** **TAPE** **TUNER**  
**4** **5** **6**

**AUX-HDD** **USB** **BLUETOOTH**  
**7** **8** **9**

**Left Arrow** **HDMI-BAT** **PC**  
**GUIDE** **0** **FAV MARKER**  
**EPG**

**NETFLIX** **APP** **YouTube** **Prime Video**

**SEARCH** **REPEAT** **REPEAT A-B** **RANDOM**

**Mandis**  
 shop  
 www.mandis.tv